





PIPE TOOLS & VISES  
SINCE 1896

# C Cutter TC5075SLR


## Operating Instructions

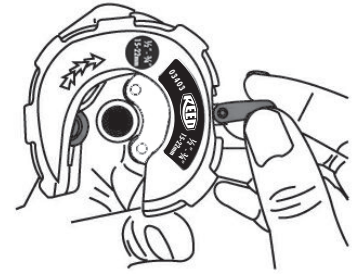


1. Flip handle up and rotate handle to adjust the slide block to the desired size mark.

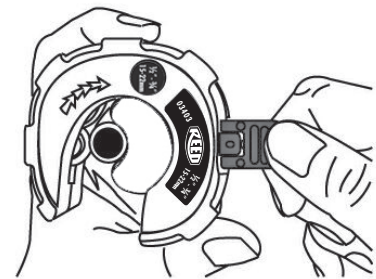


2. Insert pipe into the cutter and rotate as indicated by the arrows on the side of the body.

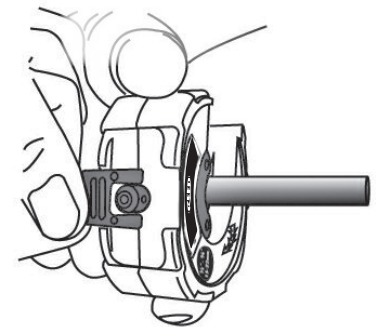

3. Rotate until the pipe is cut.

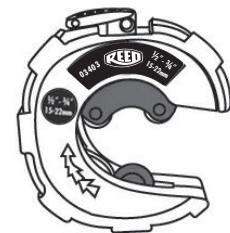

**NOTE:** No need to readjust when cutting the same size pipe.

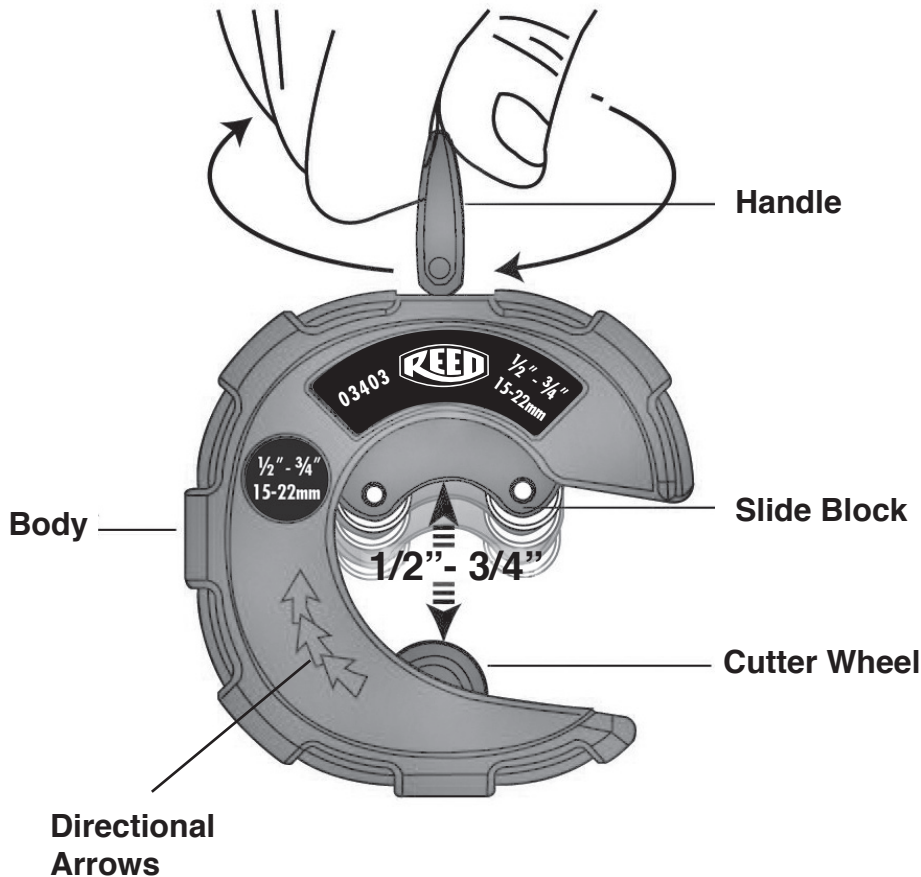

**NOTE:** Uses REED's quality TCKCW  
Cutter Wheel #03376 or 2-pack #63376.