






PIPE TOOLS & VISES
SINCE 1896

Ratcheting Valve Key Instructions

Applies to: 02349, 02350, 02351

Ratcheting Valve Keys Set-up

1. Remove VK Pin (32340) from the top square drive of the VKR Upper Shaft (92343) and slide the VKR Ratchet (92356) over top. Replace pin.
2. Install the appropriate sized valve key into the VKR Upper Shaft at the required height and secure using the VK Pin.
3. Turn the Valve Key assembly using the ratchet, reversing direction when needed by moving the toggle on the VKR Ratchet.

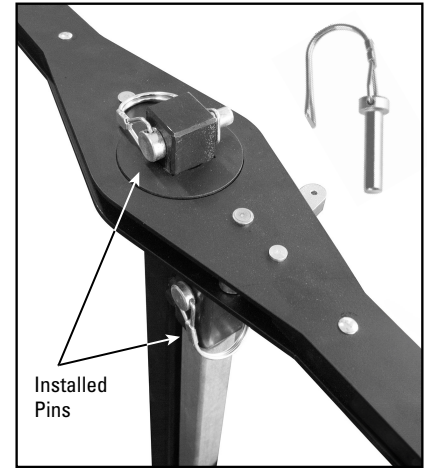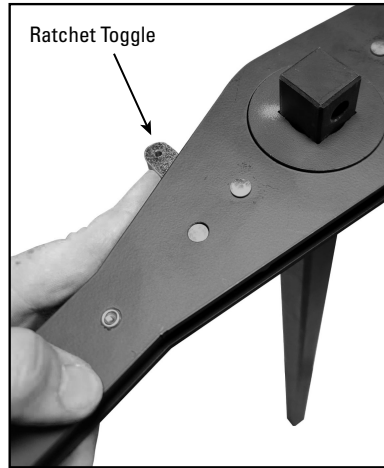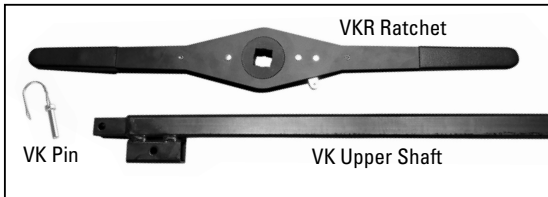

Reed Manufacturing
1425 West 8th St.
Erie, PA 16502 USA

QUALITY
&Service
that Last a Lifetime

Phone: 800-666-3691 or +1-814-452-3691
reedsales@reedmfgco.com
www.reedmfgco.com

0924-52344

Ratcheting Valve Key Instructions




Applies to: 02349, 02350, 02351



PIPE TOOLS & VISES
SINCE 1896

Ratcheting Valve Keys Set-up

1. Remove VK Pin (32340) from the top square drive of the VKR Upper Shaft (92343) and slide the VKR Ratchet (92356) over top. Replace pin.
2. Install the appropriate sized valve key into the VKR Upper Shaft at the required height and secure using the VK Pin.
3. Turn the Valve Key assembly using the ratchet, reversing direction when needed by moving the toggle on the VKR Ratchet.

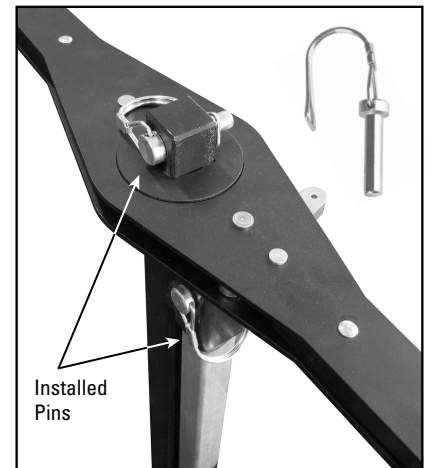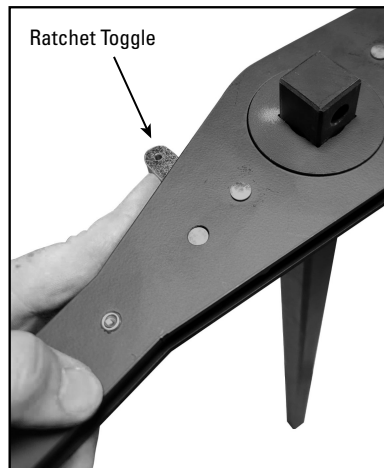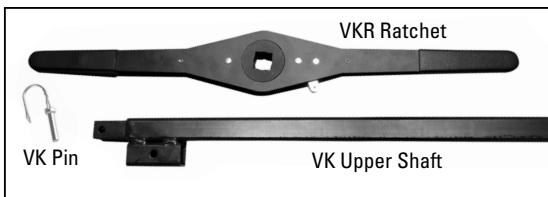

Reed Manufacturing
1425 West 8th St.
Erie, PA 16502 USA

QUALITY
&Service
that Last a Lifetime

Phone: 800-666-3691 or +1-814-452-3691
reedsales@reedmfgco.com
www.reedmfgco.com

0924-52344